



DATI TECNICI CROSS-R/RV


INTERASSI E FISSAGGI

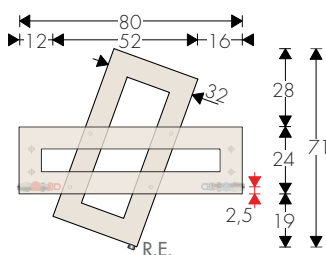


CROSS-R 70-80

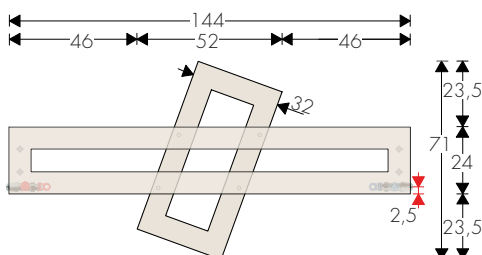


CROSS-R 70-144

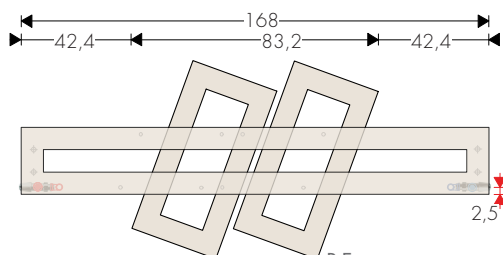


CROSS-R2 70-168

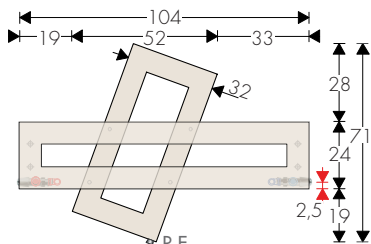


CROSS-R 70-104

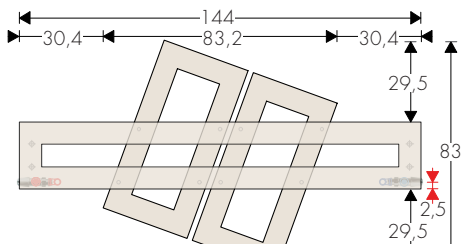


CROSS-R2 83-144

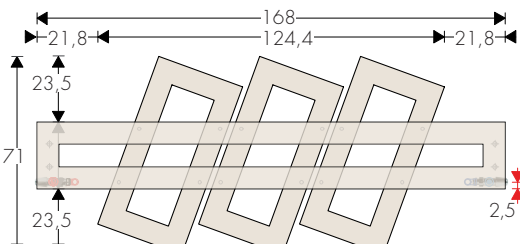


CROSS-R3 70-168

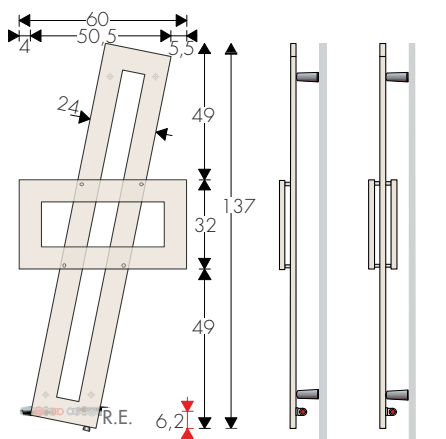

CROSS-R 137-60

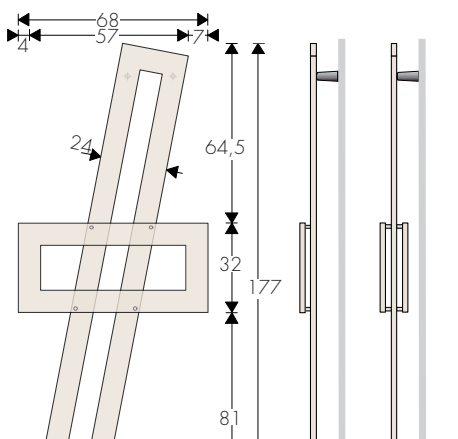


CROSS-R 177-68

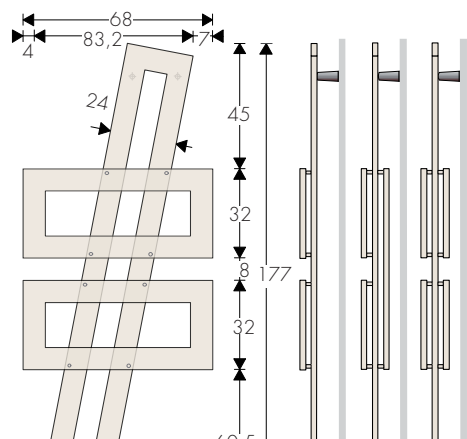


CROSS-R2 177-68

RE: Manicotto per Resistenza Elettrica (a richiesta)


CROSS-2R 177-68
CROSS-3R 177-68
CROSS-4R 177-68

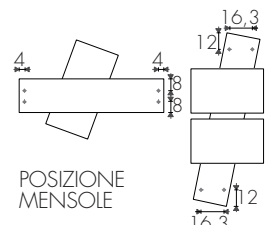


POSIZIONE
MENSOLE

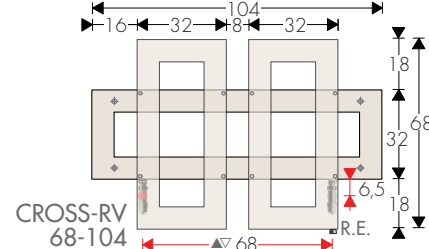


CROSS-RV
68-104

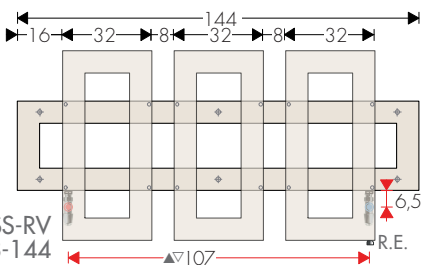


CROSS-RV
68-144

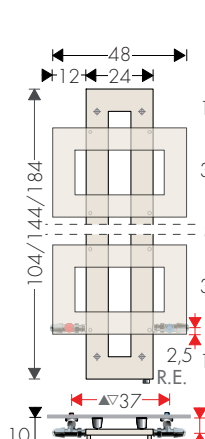

CROSS-RV ...-48

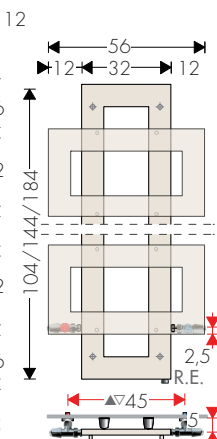

CROSS-RV...-56

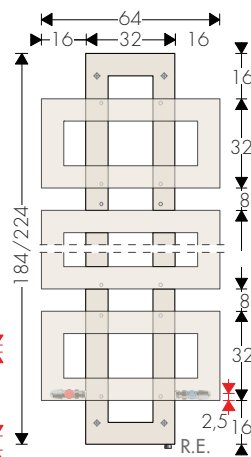

CROSS-RV ...-64